



Product Description

MASTER PL-C Xtra 4 Pin

Energy-saving compact fluorescent lamps
Compact long-arc low-pressure mercury discharge lamp
Envelope consists of 4 parallel narrow fluorescent tubes

Benefits

- Extra long life
- Longer lifetime and less early failures lead to less hassle and lower maintenance costs and facilitate the change from spot to group replacement
- Optimal light performance for long operation per switch on

Features

- 4-pin base without starter and capacitor
- Significant reduction of early failures
- Extra long and reliable lifetime

Application


- Designed for general or supplementary lighting in professional environments
- Recessed or surface-mounted downlighters, wall units, table lamps and pendant lamps
- Suitable for use in applications where maintenance costs are high (high ceilings, difficult to reach): department stores, supermarkets, warehouses, production halls and public areas

Warnings and Safety

- Lamp light technical and electrical characteristics are influenced by operating conditions, i.e. lamp ambient temperature and operating position as well as applied HF control gear
- Shorter lamp life when often switching and not well pre-heated electrodes
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

MASTER PL-C Xtra 4 Pin

Dimensional drawing

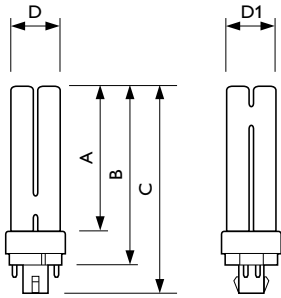

Product	D (max)	D1 (max)	A (max)	B (max)	C (max)
MASTER PL-C Xtra 26W/ 840/4P 1CT/5X10BOX	27.1 mm	27.1 mm	130.7 mm	149.0 mm	163.9 mm

