



# DigiStreet

## BGP761 LED45-/740 I DM10 DGR 32-48

DigiStreet Mini - LED Module 4500 lm - 740 neutral white - Safety class I - Distribution medium 10 - Dark Grey - Luminaire surge protection level up to 6 kV differential mode and 8 kV common mode - Spigot for diameter 32-48 mm

Developed with the aim of becoming your long-term partner, the system-ready architecture of DigiStreet enables you to enjoy the benefits of connected lighting systems today and also gets the city ready for the innovations to come! Its two sockets enable you to connect directly to the Philips CityTouch system and it is also prepared to connect you to the future innovations of IoT. Next to this, each individual luminaire is uniquely identifiable, thanks to the Philips Service tag application. With a simple scan of a QR code, placed on the inside of the mast door, you gain instant access to the luminaire configuration, making maintenance and programming operations faster and easier, no matter what stage of the luminaire's lifetime. DigiStreet is also equipped with dedicated light recipes that: 1) maintain optimal ecosystems for bats or 2) preserve a dark night sky.

### Product data

General Information	
Lamp family code	LED45 [ LED Module 4500 lm]
Light source colour	740 neutral white
Light source replaceable	Yes
Number of gear units	1 unit
Driver/power unit/transformer	PSU [ Power supply unit]
Driver included	Yes
Optical cover/lens type	FG [ Flat glass]
Luminaire light beam spread	157° - 33° x 55°
Control interface	-

Connection	Screw connection block 3-pole
Cable	-
Protection class IEC	Safety class I
Flammability mark	NO [-]
CE mark	CE mark
ENEC mark	ENEC mark
Warranty period	5 years
Optic type outdoor	Distribution medium 10

Remarks	* At extreme ambient temperatures the luminaire might automatically dim down to protect components
Constant light output	No
Number of products on MCB (16 A type B)	11
EU RoHS compliant	Yes
Light source engine type	LED
Serviceability class	Class A, the luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge-protection device, optics, front cover and mechanical parts
Product family code	BGP761 [ DigiStreet Mini]

## Light Technical

Upward light output ratio	0
Standard tilt angle post-top	0°
Standard tilt angle side entry	0°

## Operating and Electrical

Input Voltage	220-240 V
Input frequency	50 to 60 Hz
Inrush current	46 A
Inrush time	0.25 ms
Power factor (min.)	0.92

## Controls and Dimming

Dimmable	Yes
----------	-----

## Mechanical and Housing

Housing material	Aluminium die-cast
Reflector material	Polycarbonate
Optic material	Acrylate
Optical cover/lens material	Glass
Fixation material	Stainless steel
Mounting device	32/48 [ Spigot for diameter 32-48 mm]
Optical cover/lens shape	Flat
Optical cover/lens finish	Clear
Overall length	860 mm
Overall width	236 mm
Overall height	107 mm
Effective projected area	0.0666 m <sup>2</sup>

Colour	Dark Grey
Dimensions (height x width x depth)	107 x 236 x 860 mm (4.2 x 9.3 x 33.9 in)

## Approval and Application

Ingress protection code	IP66 [ Dust penetration-protected, jet-proof]
Mech. impact protection code	IK09 [ 10 J]
Surge protection (common/differential)	Luminaire surge protection level up to 6 kV differential mode and 8 kV common mode

## Initial Performance (IEC Compliant)

Initial luminous flux (system flux)	4050 lm
Luminous flux tolerance	+/-7%
Initial LED luminaire efficacy	150 lm/W
Init. Corr. Colour Temperature	4000 K
Init. Colour rendering index	70
Initial chromaticity	(0.38, 0.38) SDCM <5
Initial input power	27 W
Power consumption tolerance	+/-11%
Init. colour rendering index tolerance	-2

## Over Time Performance (IEC Compliant)

Control gear failure rate at median useful life 100,000 h	10 %
Lumen maintenance at median useful life* 100,000 h	L98

## Application Conditions


Ambient temperature range	-40 to +50 °C
Maximum dimming level	Not applicable

## Product Data

Full product code	871869637693500
Order product name	BGP761 LED45-/740 I DM10 DGR 32-48
EAN/UPC – product	8718696376935
Order code	37693500
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
SAP material	910925866230
SAP net weight (piece)	7.708 kg




Dimensional drawing

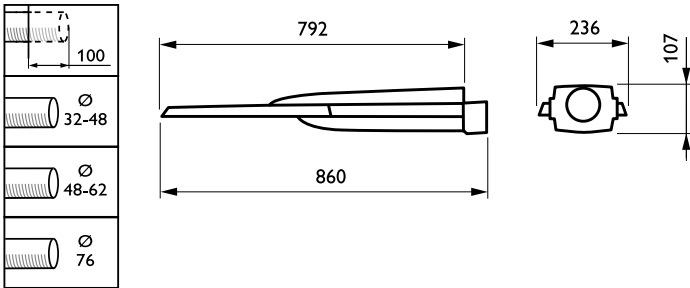

DigiStreet BGP760-BTP764

Photometric data

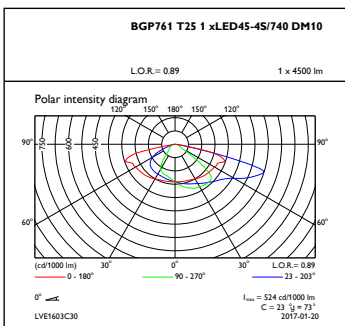

OFPC1\_BGP761T251xLED45-4S740DM10

