



CitySoul gen2 LED Large

BRP531 LED120-4S/830 II DM50 D9 SRG10 AL

CitySoul gen2 Large - LED module 12000 lm - 830 warm white - Power supply unit with DALI interface - Safety class II - Distribution medium 50 - Clear glass - Grey - Surge protection level until 10 kV - - - Side-entry for diameter 60 mm

CitySoul gen2 LED is one of the most versatile and inspirational urban street lighting families designed by Philips to date. This highly efficient range delivers excellent lighting levels whilst also providing the right ambiance for all urban application areas, from the outskirts of the city right through to the city center. By evolving the modularity of the CitySoul family and adding new innovations like the Lyre and the Accent bracket, Philips has made this range the ideal toolbox for every urban context. The design is flatter, completely round, and the transitions with the spigot and bracket entirely flush, thereby giving your cityscape a coherent, elegant and discreet identity. Designed around its LED engine, CitySoul gen2 LED is highly efficient and easy to maintain. It comes in two sizes and is suitable for side-entry, post-top, catenary and suspended mounting.

Product data

General Information		Driver included	Yes
Number of light sources	60 [60 pcs]	Optical cover/lens type	GC [Clear glass]
Lamp family code	LED120 [LED module 12000 lm]	Luminaire light beam spread	-
Light source colour	830 warm white	Control interface	DALI
Light source replaceable	Yes	Connection	Screw connection block
Number of gear units	1 unit	Cable	-
Driver/power unit/transformer	PSD [Power supply unit with DALI interface]	Protection class IEC	Safety class II

CitySoul gen2 LED Large

Flammability mark	NO [-]
CE mark	CE mark
ENEC mark	ENEC mark
Warranty period	5 years
Optic type outdoor	Distribution medium 50
Remarks	* At extreme ambient temperatures the luminaire might automatically dim down to protect components
Constant light output	No
Number of products on MCB (16 A type B)	8
EU RoHS compliant	Yes
Light source engine type	LED
Serviceability class	Class A, the luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge-protection device, optics, front cover and mechanical parts
Product family code	BRP531 [CitySoul gen2 Large]

Light Technical

Upward light output ratio	0.03
Standard tilt angle post-top	-
Standard tilt angle side entry	-

Operating and Electrical

Input Voltage	220 to 240 V
Input frequency	50 to 60 Hz
Inrush current	53 A
Inrush time	0.3 ms
Power factor (min.)	0.99

Controls and Dimming

Dimmable	Yes
----------	-----

Mechanical and Housing

Housing material	Aluminium
Reflector material	Acrylate
Optic material	Polymethyl methacrylate
Optical cover/lens material	Glass
Fixation material	Aluminium
Mounting device	60S [Side-entry for diameter 60 mm]
Optical cover/lens shape	Flat
Optical cover/lens finish	Clear
Overall height	100 mm
Overall diameter	735 mm

Effective projected area	0.061 m ²
Colour	Grey
Dimensions (height x width x depth)	100 x NaN x NaN mm (3.9 x NaN x NaN in)

Approval and Application

Ingress protection code	IP66 [Dust penetration-protected, jet-proof]
Mech. impact protection code	IK08 [5 J vandal-protected]
Surge protection (common/differential)	Surge protection level until 10 kV

Initial Performance (IEC Compliant)

Initial luminous flux (system flux)	10080 lm
Luminous flux tolerance	+/-7%
Initial LED luminaire efficacy	111 lm/W
Init. Corr. Colour Temperature	3000 K
Init. Colour rendering index	≥80
Initial chromaticity	(0.43, 0.40) SDCM <5
Initial input power	91 W
Power consumption tolerance	+/-11%
Init. colour rendering index tolerance	+/-2

Over Time Performance (IEC Compliant)


Control gear failure rate at median useful life 100,000 h	10 %
Lumen maintenance at median useful life* 100,000 h	L96

Application Conditions

Ambient temperature range	-40 to +50 °C
Performance ambient temperature Tq	25 °C
Maximum dimming level	10%

Product Data

Full product code	871869987869600
Order product name	BRP531 LED120-4S/830 II DM50 D9 SRG10 AL
EAN/UPC – product	8718699878696
Order code	87869600
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
SAP material	912300024412
SAP net weight (piece)	18.000 kg



CitySoul gen2 LED Large


Dimensional drawing




9 |

CitySoul gen2 BGP/BPP/BRP/BSP/BVP530/531

Photometric data

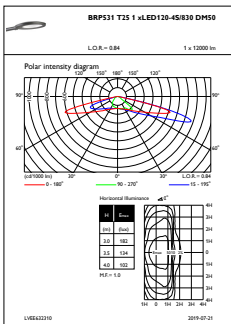

OFPL1_BRP531T251xLED120-4S830DM50

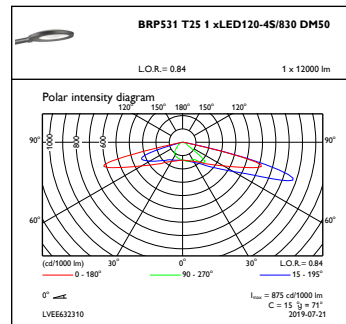

OFPC1_BRP531T251xLED120-4S830DM50

