



Trueforce CorePro LED HPL

TForce Core LED HPL 36W E40 840 FR

The new Philips Trueforce Core LED HPL lamps offer you an easy, short-payback LED solution to replace High Intensity Discharge (HID) lamps.; This new generation of products brings all the energy-efficiency and long-lifetime benefits of LED to HID replacement, while providing instant saving with a low initial investment.

Furthermore, they're designed to have the same lamp size and light distribution as other HID lamps, so you will never know the difference. All thanks to our High-Power LED filament technology.; Plus, its unique IP65 design means that it can be used for outdoor use as well as indoor use.

Product data

General Information	
Cap base	E40 [E40]
EU RoHS compliant	Yes
Nominal lifetime (nom.)	25000 h
Switching cycle	15,000X
Technical type	36-125W
	Sphere

Light Technical	
Colour Code	840 [CCT of 4,000 K]
Beam Angle (Nom)	300 °
Luminous flux (nom.)	6000 lm
Colour designation	Cool White (CW)
Correlated Colour Temperature (Nom)	4000 K
Luminous efficacy (rated) (nom.)	166.00 lm/W
Colour consistency	<6
Colour rendering index (nom.)	80

LLMF at end of nominal lifetime (nom.)	70 %
--	------

Operating and Electrical	
Input frequency	50 to 60 Hz
Power (Rated) (Nom)	36 W
Lamp current (nom.)	165 mA
Wattage equivalent	125 W
Starting time (nom.)	0.5 s
Warm-up time to 60% light (nom.)	0.5 s
Power factor (nom.)	0.9
Voltage (Nom)	220-240 V

Temperature	
T-Case maximum (nom.)	60 °C

Trueforce CorePro LED HPL

Controls and Dimming

Dimmable	No
----------	----

Mechanical and Housing

Lamp Finish	Frosted
Bulb shape	ED90.


Approval and Application

Energy Efficiency Class	C
Energy consumption kWh/1,000 hours	36 kWh
	403657

Product Data

Full product code	871951429933700
Order product name	TForce Core LED HPL 36W E40 840 FR
EAN/UPC – product	8719514299337
Order code	29933700
SAP numerator – quantity per pack	1
Numerator – packs per outer box	6
SAP material	929002481502
SAP net weight (piece)	0.190 kg


Dimensional drawing

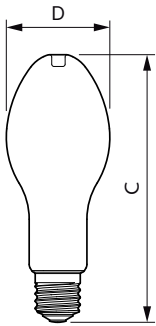


Tforce 37W 6000lm 4000K E40 ND

Product	D	C
TForce Core LED HPL 36W E40 840 FR	90 mm	230 mm

Photometric data

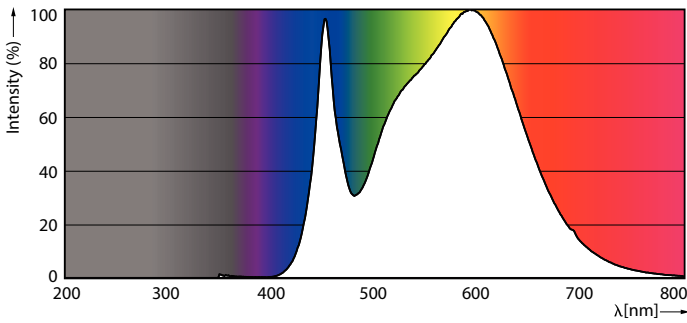


LEDTForce 36W ED90 E40 840

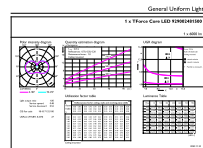

LEDTForce 36W ED90 E40 840

Trueforce CorePro LED HPL

Photometric data

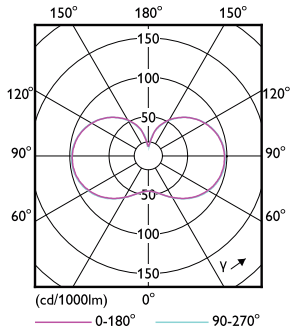

LEDTForce 36W ED90 E27

Lifetime



LEDspots LED 25K



LEDspots LMP 25K

